

PANTERA
DP1500i /
DP1600i
Tier3

MAINTENANCE KITS
Symbol Descriptions

- Change/Replace
- Cooling liquid
- Lubricant/oil
- Fuel

Filling Points

 
 
 
 
 
 
 
 
 
A	Fuel Tank
B	Hydraulic oil tank
C	Cooling system
D	Engine oil
E	Transmission gear
F	Winch
G	Shank lubrication tank
H	Final drive
I	Track drive
J	Idler wheel
K	Compressor air receiver
L	DEF fluid tank(TIER4)
M	AC refrigerant R134a
N	AC compressor oil
P	Circulating shank lubrication tank (optional)

It is always recommended to adjust maintenance intervals according to your operation conditions

The warranty is not valid if other than **GENUINE SANDVIK SPARE PARTS** have been used in the equipment.

For ordering Maintenance Kits contact your local Sandvik Sales Organization or visit mining.sandvik.com

Sandvik reserves the right to change the service parts or this information without further notice. Please cross-check part numbers and quantities from the Parts manual.

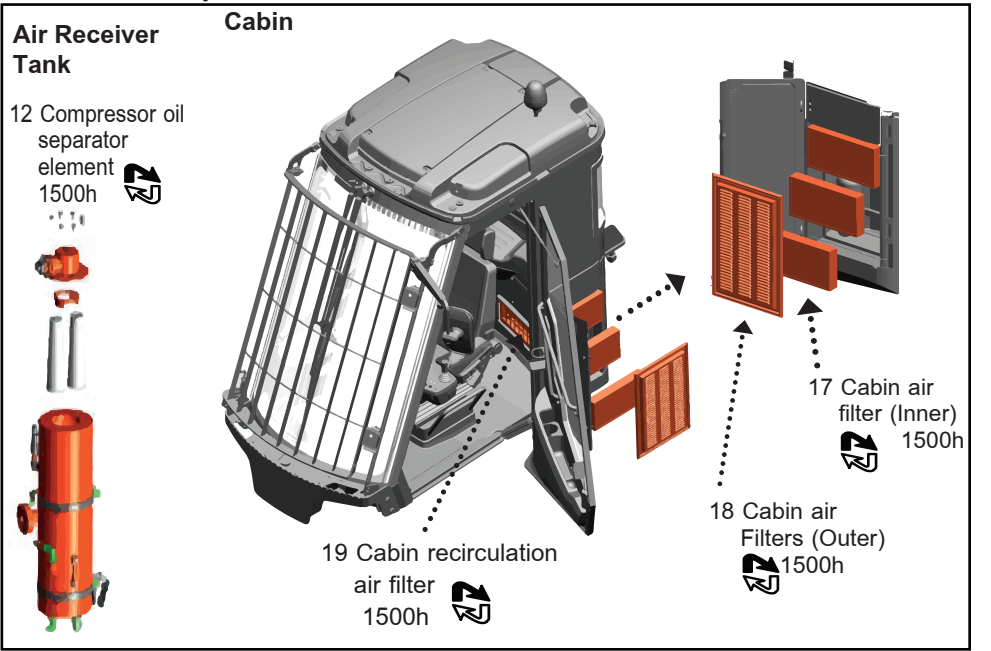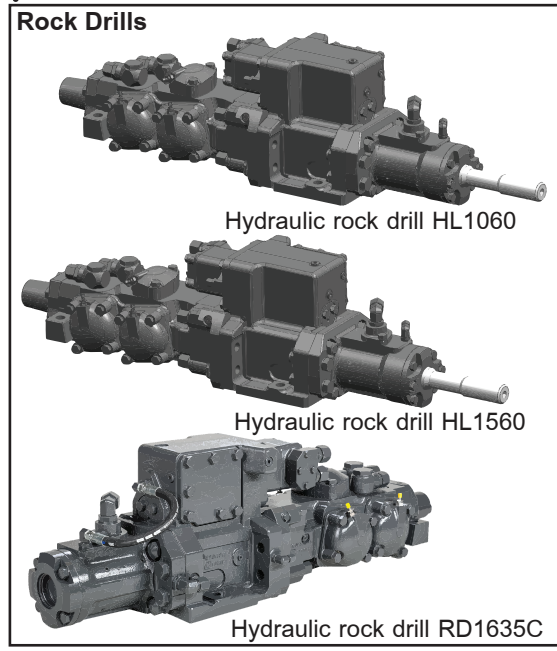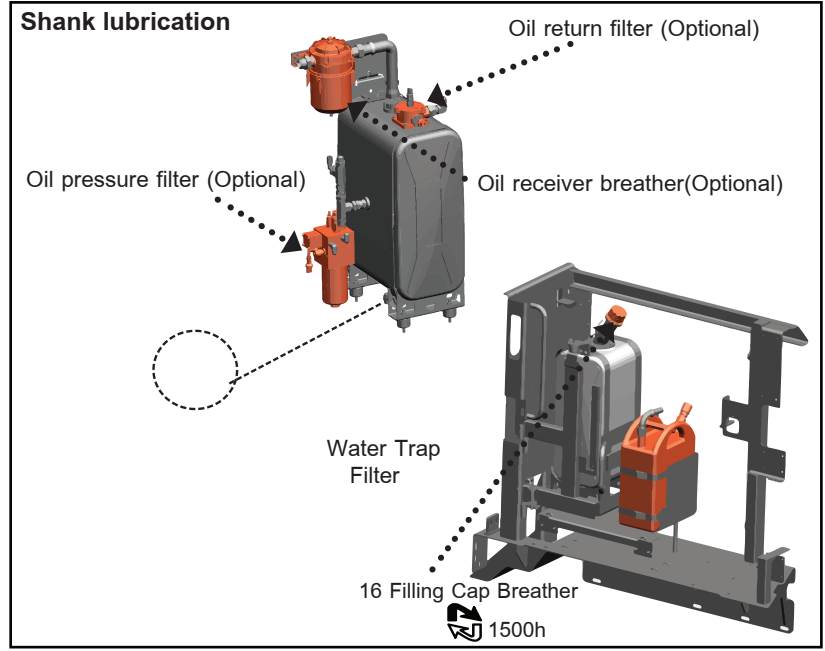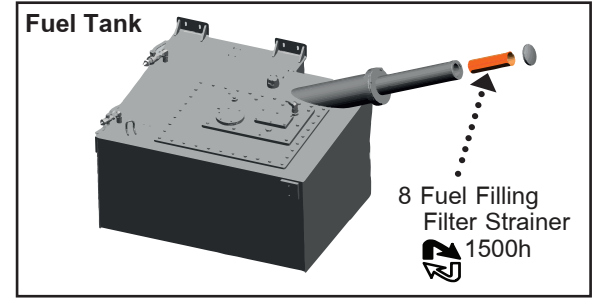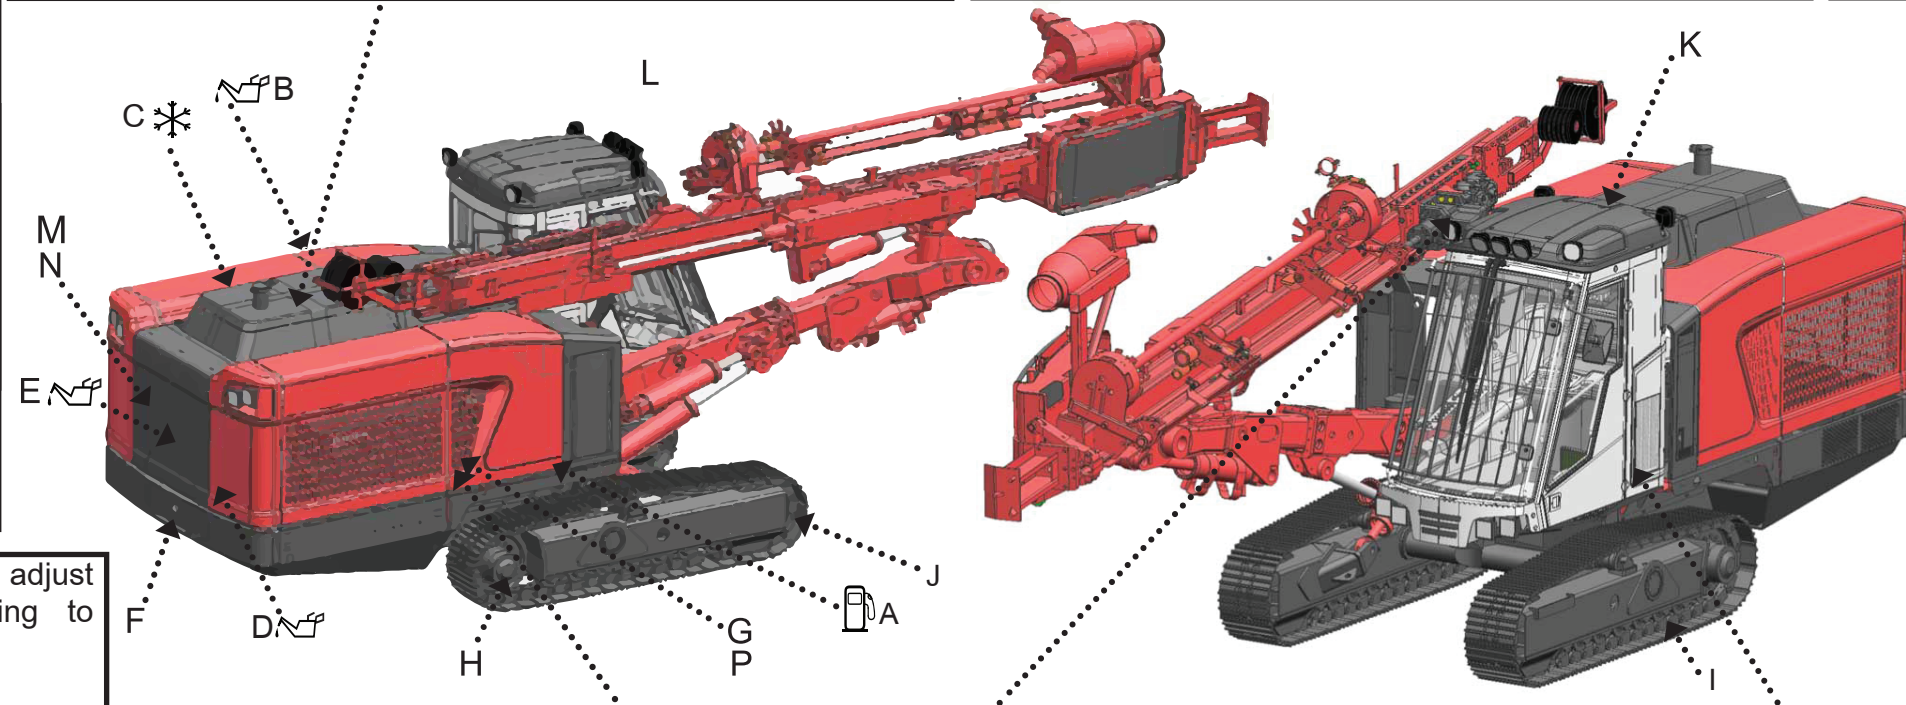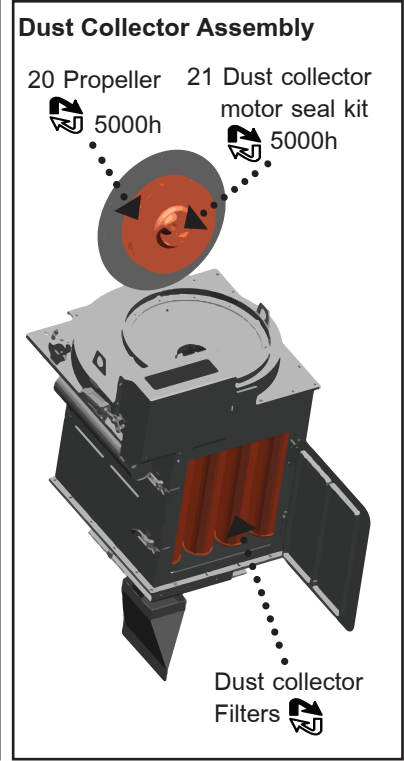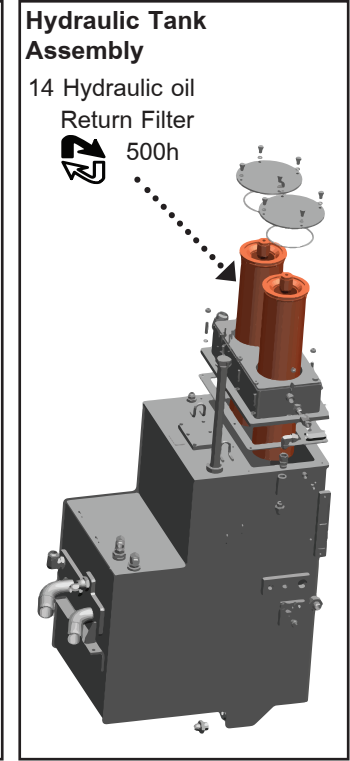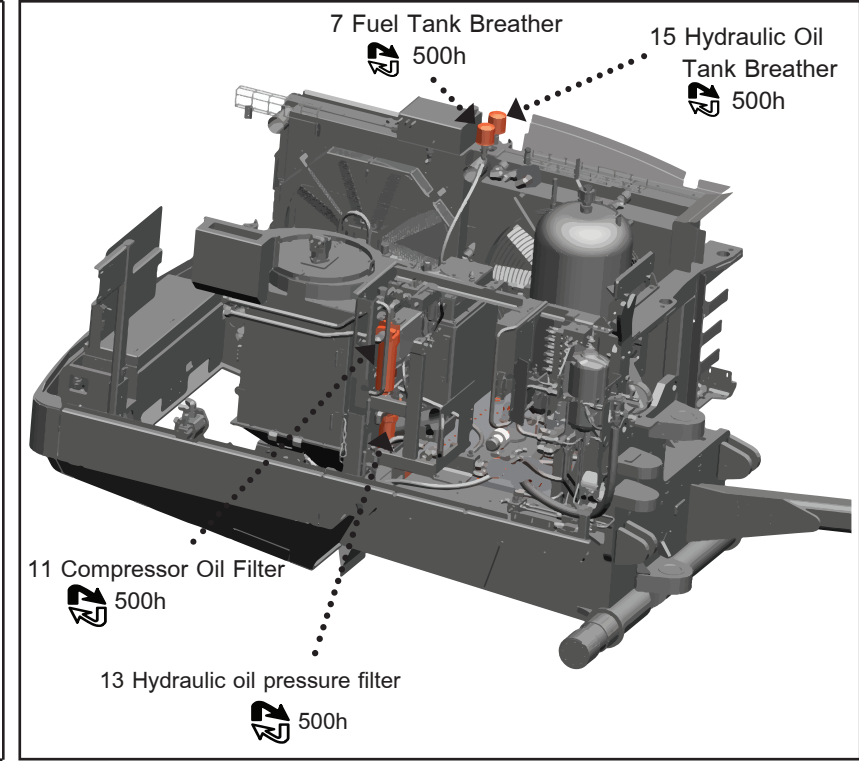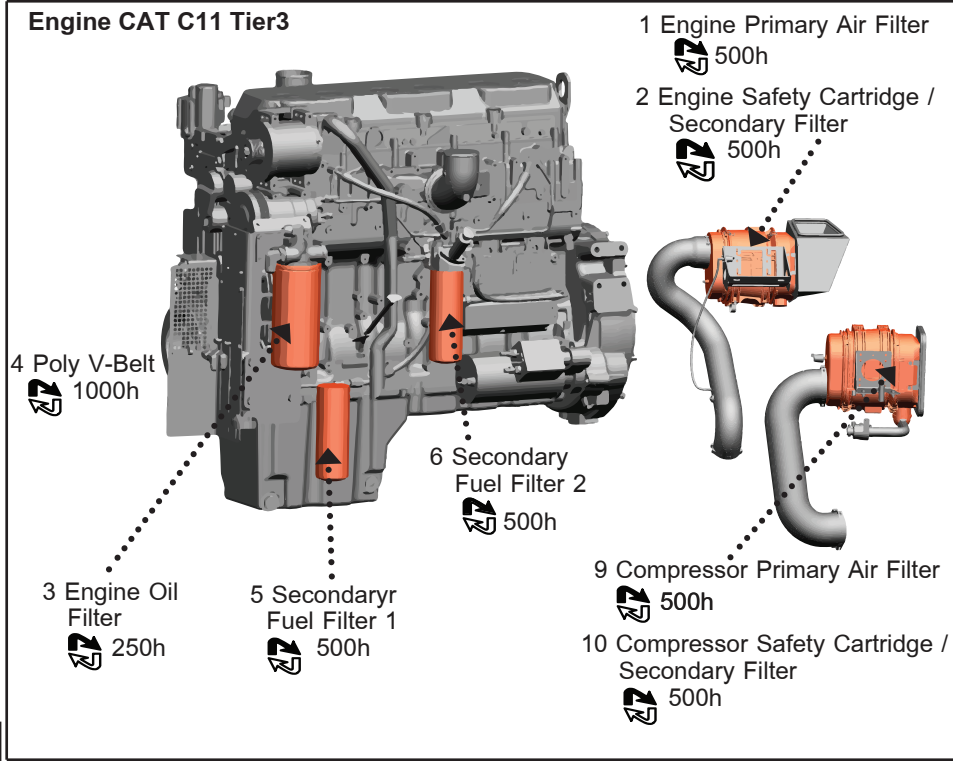

PANTERA
DP1500i /
DP1600i
Tier3
MAINTENANCE KITS

For ordering Maintenance Kits contact your local Sandvik Sales Organization or visit mining.sandvik.com

Sandvik reserves the right to change the service parts or this information without further notice. Please cross-check part numbers and quantities from the Parts manual.

It is always recommended to adjust maintenance intervals according to your operation conditions.

The warranty is not valid if other than **GENUINE SANDVIK SPARE PARTS** have been used in the equipment.

Note:
Follow the Maintenance program in the Maintenance manual.
- Perform 250h maintenance procedures every 250h i.e., 250h, 500h, 750h etc.,
- Perform 500h maintenance procedures every 500h i.e., 500h, 1000h, 1500h etc.,
- Perform 1000h maintenance procedures every 1000h i.e., 1000h, 2000h, 3000h etc.,
- Perform 2000h maintenance procedures every 2000h i.e., 2000h, 4000h, 6000h etc.,
- Perform 4000h maintenance procedures every 4000h i.e., 4000h, 8000h, 12000h etc.,
[Items needed at respective maintenance interval as displayed in the table are already added as part of standard maintenance kits.](#)
[Any items needed at maintenance interval apart from mentioned in table, order to be placed separately as needed.](#)

		DP1500i CAT C11 Tier3 /DP1600i CAT C11 Tier3					
			BG00983660	BG00983661	BG01380778	BG00983663	BG01381269
Sr No	Components Assembly	Qty	250h	500h	1000h	1500h	5000h
1	Engine Air Filter	1		x	x	x	x
2	Engine Secondary Air Filter / Safety Cartridge	1		x	x	x	x
3	Engine Oil Filter	1	x	x	x	x	x
4	Engine Poly V-Belts	1			x		x
5	Primary Fuel Filter / Water Separator	1	x	x	x	x	x
6	Secondary Fuel Filter	2	x	x	x	x	x
7	Fuel Tank Breather	1		x	x	x	x
8	Fuel Refilling Filter Element	1				x	
9	Compressor Air Filter	1		x	x	x	x
10	Compressor Secondary Air Filter / Safety Cartridge	1		x	x	x	x
11	Compressor Oil Filter	1		x	x	x	x
12	Compressor Oil Separator Element	2				x	
13	Hydraulic Oil Pressure Filter	1		x	x	x	x
14	Hydraulic Oil Return Filter	2		x	x	x	x
15	Hydraulic Oil Tank Breather	1		x	x	x	x
16	Filling Cap Breather	1				x	
17	Cabin Air Filter Fine (Inner)	3				x	
18	Cabin Air Filter Course (Outer)	1				x	
19	Cabin Recirculation Air Filter	1				x	
20	Impeller (Propeller)	1					x
21	Dust Collector Motor Seal Kit	1					x